






How to fit vertical blinds

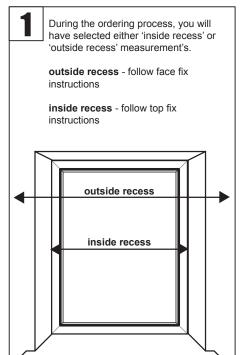


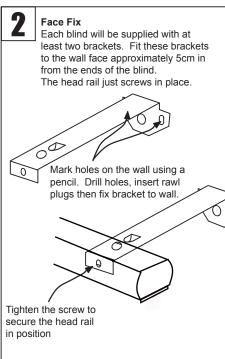

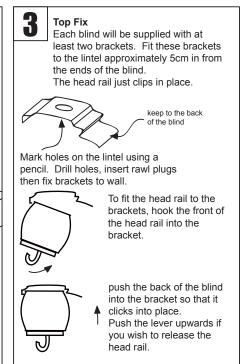


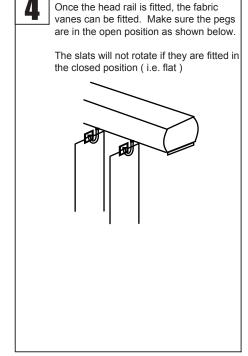


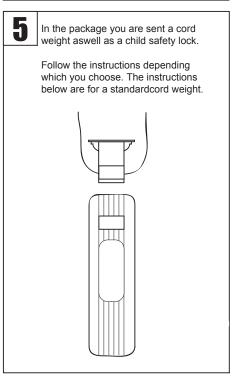


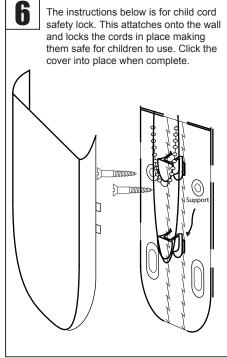



In the box



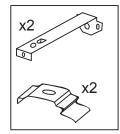



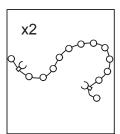



TOOIS Suggested

- screwdriver
- drill (5mm)
- pencil
- tape measure
- spirit level