

# How To Measure Roller Blinds


0161 452 0784  
sales@shop4blinds.co.uk

shop4blinds

## Recess Size ( for fitting inside the window recess )

Measure the width at the top of the recess where the roller is to be fitted and the drop from the top of the recess to the bottom. Do not deduct anything off the sizes approximately 10mm will be deducted from the width during the manufacturing process to make sure it fits properly.

Roller blind fabric is approx 35mm narrower than the full blind size so if you have tiles at the bottom of the recess ensure this gives enough clearance at the bottom.

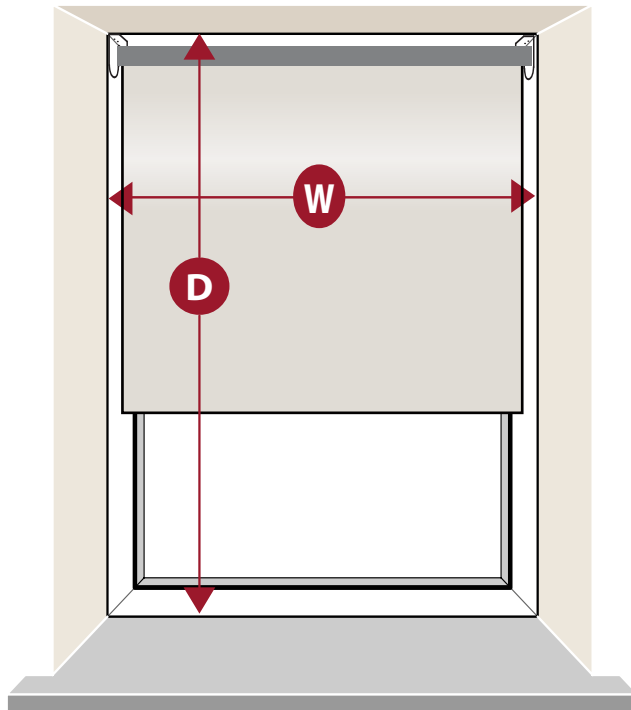

## Exact Size ( for fitting outside the window recess )

Measure at least 5cm ( 2" ) outside the recess for the width and height of the roller blind. This size will be the bracket to bracket size and we will not deduct anything from these sizes.

Remember the fabric on roller blinds is approximately 35mm narrower than the overall blind size so allow for this when measuring the overlap.

