

# How To Measure For Venetian Blinds

0161 452 0784  
sales@shop4blinds.co.uk


shop4blinds

## Recess Size ( for fitting inside the window recess )

Measure the width of the recess at the top, middle & bottom and note the smallest measurement. Then measure the recess drop at the left, middle and the right hand side and note down the smallest size.

Do not deduct anything off the sizes, approximately 10mm will be deducted from the width & drop during the manufacturing process to make sure it fits properly.

If there is an obstruction e.g. dado-rail, skirting board or part tiled at the bottom then measure the smallest width inside the obstruction and give this size as your width.

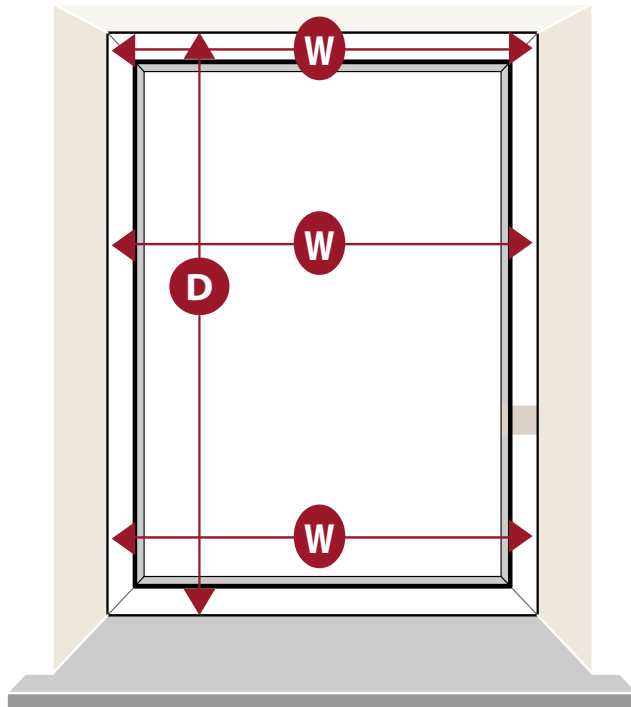

## Exact Size ( for fitting outside the window recess )

Measure at least 5cm ( 2" ) outside the recess for the width and height of the vertical blind.

This size will be the exact size the blind is made to.

